














## Info Bar


The Info Bar displays information and status of the current program. Press  to display information for the next channel. Press  to display information for the previous channel. Press  to display the next program on the channel. Press  to display the previous program on the channel. Press  to lock the current channel. You will be asked for the Subscriber ID/PIN. Scroll right, press . At that point the channel is locked.

## Electronic Program Guide (EPG)



Press  to display the EPG on your TV. The guide displays as a transparent menu on the screen and shows the available channels, title of shows and show times. The guide also shows a description of the currently selected program and displays the current date and time in the upper right-hand corner. Press   to navigate through the EPG. Once a program is highlighted press  to tune to that channel. Press  to close the EPG.

## Video On Demand (VOD)




Selecting VOD from the main menu allows you to search for a movie based on content categories. Press   to navigate through the movie categories. To limit access to certain content please see Parental Control in this guide.

Once a category is selected you will see the movie listings available. Press  to enter your selection. The movie synopsis, rating and price will appear. You will be able to preview or purchase a movie at this time.

**NOTE:** You will only be able to cancel a VOD rental within the first 4 minutes after you click on purchase.

At any time you can pause/fast forward/rewind/stop/start the movie. To check when the movie expires press , then scroll over to the "My Account" icon. To restart/rewatch a movie go to "My Account", then View Rentals. If there is a movie that has not expired press .

## Parental Control

From the My Account icon go to Manage Account. Create a new account (this account ID and PIN must be different from Subscriber ID and PIN). Choose the maximum rating you'd like this account to see and a credit limit for VOD. When you reach 'add account' press . Now press , scroll to My Account and press . Next turn security 'on'. You may repeat this process for each additional account you wish to add. You must log off at this point, then log in again to watch TV either as the master account or one you have created.

**NOTE:** Write all ID/PINs down and keep in a safe place.


# Remote Control

## Quick Reference Guide

ComSpan Communications

# ComSpan Communications

## Remote Control Functions\*

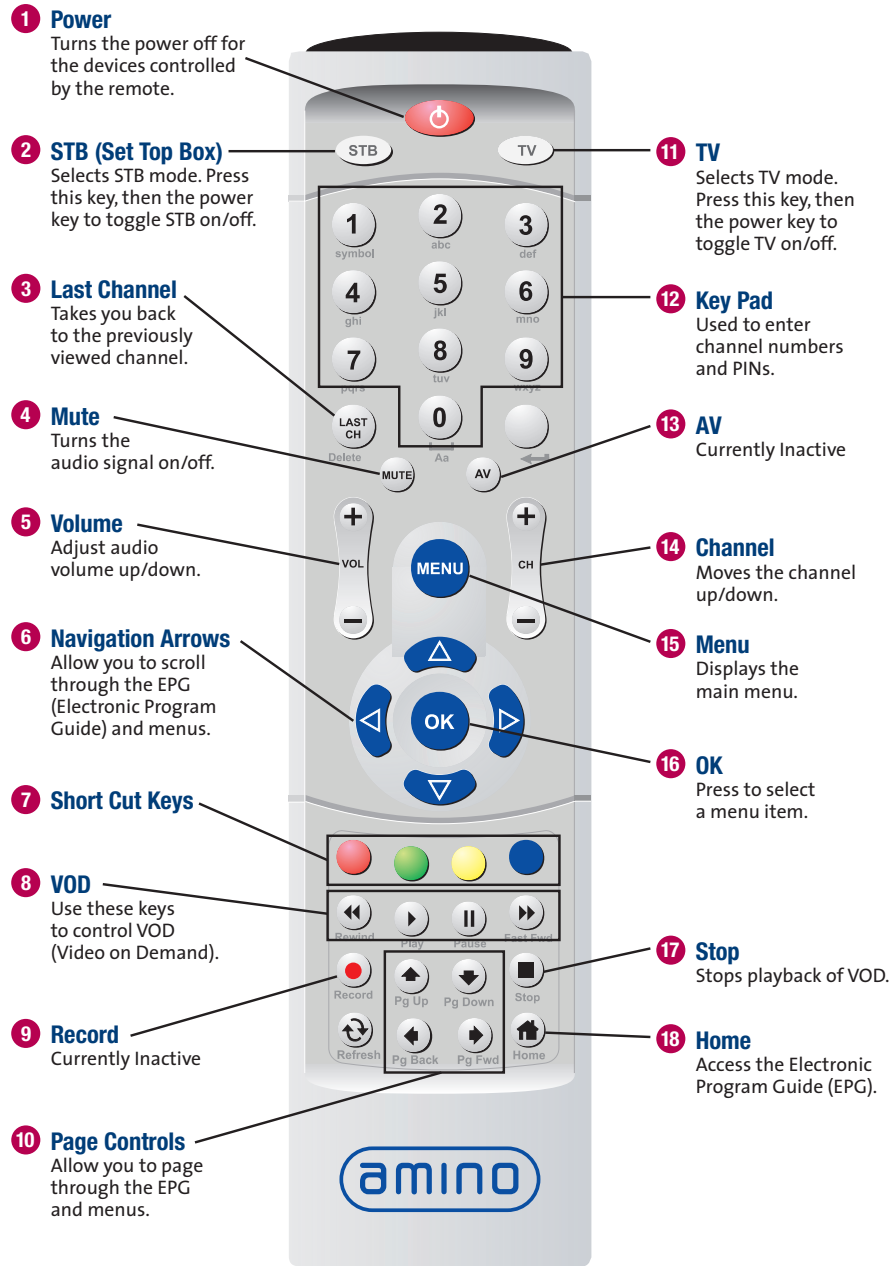

## Quick Reference Guide

### Subscriber Log In

Upon initialization of the Set Top Box (STB) or in the event of a power loss to the box you will need to enter your Subscriber ID for your main account and your personal identification number (PIN). Select the Submit button and press **OK** to access Live TV and services offered by the provider.

### Power On/Off

Press located at the top of your remote to control power.

The power key toggles the STB between Standby and On. It also toggles the TV between On and Off. To toggle the STB, press then . To toggle the TV, press , then . The key for the control mode in effect illuminates when key is pressed.

### Volume

Control volume using the button located on the left side of your remote. (TV must be programmed to work with Amino remote)

### Change Channels

Use the numeric keypad on the remote to enter channel numbers 000 through 999. When entering a channel number, the number you are entering displays in the upper left-hand corner of the TV.

Press to return to the last channel you viewed. Press to move up and down one channel at a time.

Press to access the Electronic Program Guide (EPG). Use the up and down Navigational Arrows to find a channel. Press to make a selection.

### Main Menu



The main menu is the point from where you access the entertainment choices provided with your service. Press to display and remove the main menu. Use to move left and right among the icons. Press to enter the selection. Press to quit the menu.

\*Amino 110