

Quick Reference Guide

Select Mode Buttons

The 530 remote has the ability to control compatible TV, DVD players, and surround sound systems. Please see the Remote User Guide for manufacturer configuration codes.

- STB:** Press this button for the remote to control the Set Top Box functions.
- DVD/AUX:** Press to control auxiliary equipment such as a surround sound system or DVD.
- TV:** Press to control your TV functions.
- Power:** Switch on or off the Amino 530 power (STB mode must be pressed first).
- Power:** Switch on or off the TV or AUX power (TV or AUX mode must be pressed first).

Shortcut Navigation

Color coded shortcut convenience buttons.

- Red:** Displays currently viewed channel info.
- Green:** Reserved for future program features.
- Yellow:** Display the on screen channel programming guide.
- Blue:** Exit on screen display of information.

Digital Video Recorder Functionality

Play/Pause/Rewind/Fast-Forward

These controls work with Live TV, Recorded content, and VOD (Video on Demand).

- Play:** Resumes playback of viewing choice.
- Pause:** Freezes image on screen .
- Rewind:** Choose desired rewind speed with each additional press of this button. (Note: Unit will buffer up to 30 minutes of LiveTV as long as current channel is not changed).
- Fast-Forward:** Choose desired Fast-Forward speed with each additional press of this button.
- Stop:** Cancel recording, stop playback of recorded or VOD content.
- Record:** Press to start recording Live TV or program a recording from the guide.

On-Screen Display

- Info:** Displays current channel info and if pressed a second time brings up future broadcast information.
- Titles:** Reserved for future program features.



Menu Navigation Buttons

Use these buttons to scroll through the Channel Programming Guide and navigate the Menu functions.

15. Menu: Displays the main menu bar across the top of your screen with the following options:

Guide: Channel Programming Guide.

PVR: Personal Video Recorder (DVR) – Record new content or access your previously recorded content for playback, View Record History, and schedule future program recordings.

Rentals: VOD (Video on Demand) Library selection of both free content and movies for purchase. Your selections will be placed in the Vault for your immediate access.

Vault: Access your selected free content or purchased VOD for up to 5 days of multiple viewings.

Caller ID History: (Option available for Comspan voice customers only).

Messages: Comspan customer communications.

Reminders: List of all customer initiated program reminders and Auto-tune programming.

Video Packages: TBD.

Parental: Enable/Disable password protected parental controls.

Settings: Access Display settings.
Set up Parental Controls and blocking Channels.
Master and sub-accounts.
Changing Password and PIN.

Favorites: Name, create, edit, choose or delete personal favorite channel sets.

Search: Select from two search options: Guide or Rentals.
Then select:

Quick Search: To search 3 days of programming.

Extended Search: To search 2 weeks of programming.

Sign Out: Log in or out of master and sub-accounts if parental controls are enabled in the settings menu.

16. OK: Select desired function.

17. Up, Down, Right, Left: Menu navigation buttons.

18. Exit: Exits the Menu or Channel Programming Guide.

Volume and Channel Controls

Once the remote is properly configured with a compatible TV these buttons will change channels and control the TV volume while in STB mode.

19. Volume Control: VOL+ to increase and VOL- to decrease audio.

20. Channel Control: CH+ to increase and CH- to decrease channel.

21. Mute: Mute/un-mute sound.

22. P<P: View previous channel.

23. Guide: Display the on screen channel programming guide.

Text and Numeric Program Input Buttons:

These buttons provide channel selection as well as text and numeric entry for programming input.

24. Text and Numerical Keys: Press once for numerical entries.
Press and hold for Alphabetical entries. *Tip: When a text entry field is highlighted, pressing "OK" will bring up the on-screen keyboard to facilitate text entries.*

25. Back: Press to clear a mistake when entering text or numbers.

Additional Feature buttons

26. AV: Switch TV between available AV inputs.

27. PVR: Reserved for future program features.

28. Page up: To scroll to the top of a menu page.

29. Page down: To scroll to the bottom of the a menu page.

30. PIP: Reserved for future program features.

31. Swap: Reserved for future program features.

Quick Tips

Programming the Remote Control:

- Identify the manufacturer of the TV; e.g. Sony, Philips etc.
- Find the TV manufacturer in the TV brand code tables provided in the Remote Control User Guide. Most makes of TV have more than one brand code listed; if this is the case use the steps below to try all the codes until a suitable one is found.
- Press the TV Mode button and hold for 2.5 seconds. The TV button will blink twice.
- Continue to hold down the TV mode button for another 2.5 seconds. The TV button will blink twice again.
- Release TV mode button and enter the 3-digit TV brand code. At each key press, the mode button will blink. If the TV brand code is accepted, the TV button will flash twice and go out when the 3rd digit is entered. If the TV brand code is not accepted, the TV button will remain illuminated for 2.5 seconds and then go out. The remote will not have been programmed and the process will have to be repeated from the start with a new code.

Configuration Settings:

TV Manufacturer and Model _____ SD _____ HD _____ 720p _____ 1080i _____

3 Digit Remote Configuration Code: _____

DVR Output Resolution: SD _____ 480p _____ 720p _____ 1080i _____

Native pass through enabled: Yes _____ No _____

Output Format: 4/3 Letterbox _____ 4/3 Center Cut-out _____ 16/9 _____

comspan
communications